

## For lead-acid batteries until 100 Ah.

### 3 FUNCTIONS

- **Test the starting capacity of the battery.**
- **Indicates the state (good or bad) of the battery.**
- **Test the alternator voltage.** It detects if there is a problem in the load circuit of the vehicle which can damage the battery or the electronic onboard.

-> Quick analysis results (< 10 sec.) with reading simplification thanks to "colour" codes.



CE - EN 60335-2-29

Battery		TEST			PRINT PAPER	DIGITAL	RESULT	TEMPERATURE COMPENSATION	cm	kg	
Battery A	Battery V	CHARGING & STARTING SYSTEM VEHICLE									
6-12V	20>100Ah	•	•	12V	-	-	5/10s	15 min	-	16 x 1.8 x 30	1.5