



Parts List for DC830KA Type 3

Item Number	Part Number	Description	Qty Required
1	658395-02	CLAMSHELL	1
2	646693-01SV	NOSE CONE	1
3	608024-00SV	ANVIL ASSY.	1
4	642883-01	WASHER - URETHANE	1
7	038769-00	SPRING	1
8	N020802	DETENT PIN	1
9	099205-07	ROLL PIN	1
10	N118244SV	MECHANISM ASSY	1
11	646694-02SV	ARMATURE&BRGS.	1
12	N109432	MAGNET RING	1
13	N093746	BRUSH & HOLDER ASSY	1
15	N019952	VSR SWITCH (DC)	1
16	659201-00	FWD/REV BUTTON	1
17	642886-00	CONE	1
18	682211-00	SCREW,TORX	9
19	148354-03	BIT CLIP	1
20	N124282	NAME PLATE	1
21	646763-00	IDENT. LABEL	1
22	650676-00	WARNING LABEL (SPA)	1
24	659916-00SV	BELT CLIP	1
25	330013-03	SCREW	1
861	637475-00	LATCH ASSEMBLY	2
861	652211-00	KITBOX	1
861	380865-02	KIT,HANDLE	1
866	DC9091	BATTERY PACK	2
867	645221-00	BATTERY CAP	2
871	388683-12	1 HOUR CHARGER	1

COPYRIGHT© 2005. All Rights Reserved.

Parts list, pricing, and availability subject to change. Please visit www.dewaltservicenet.com for current parts information.