


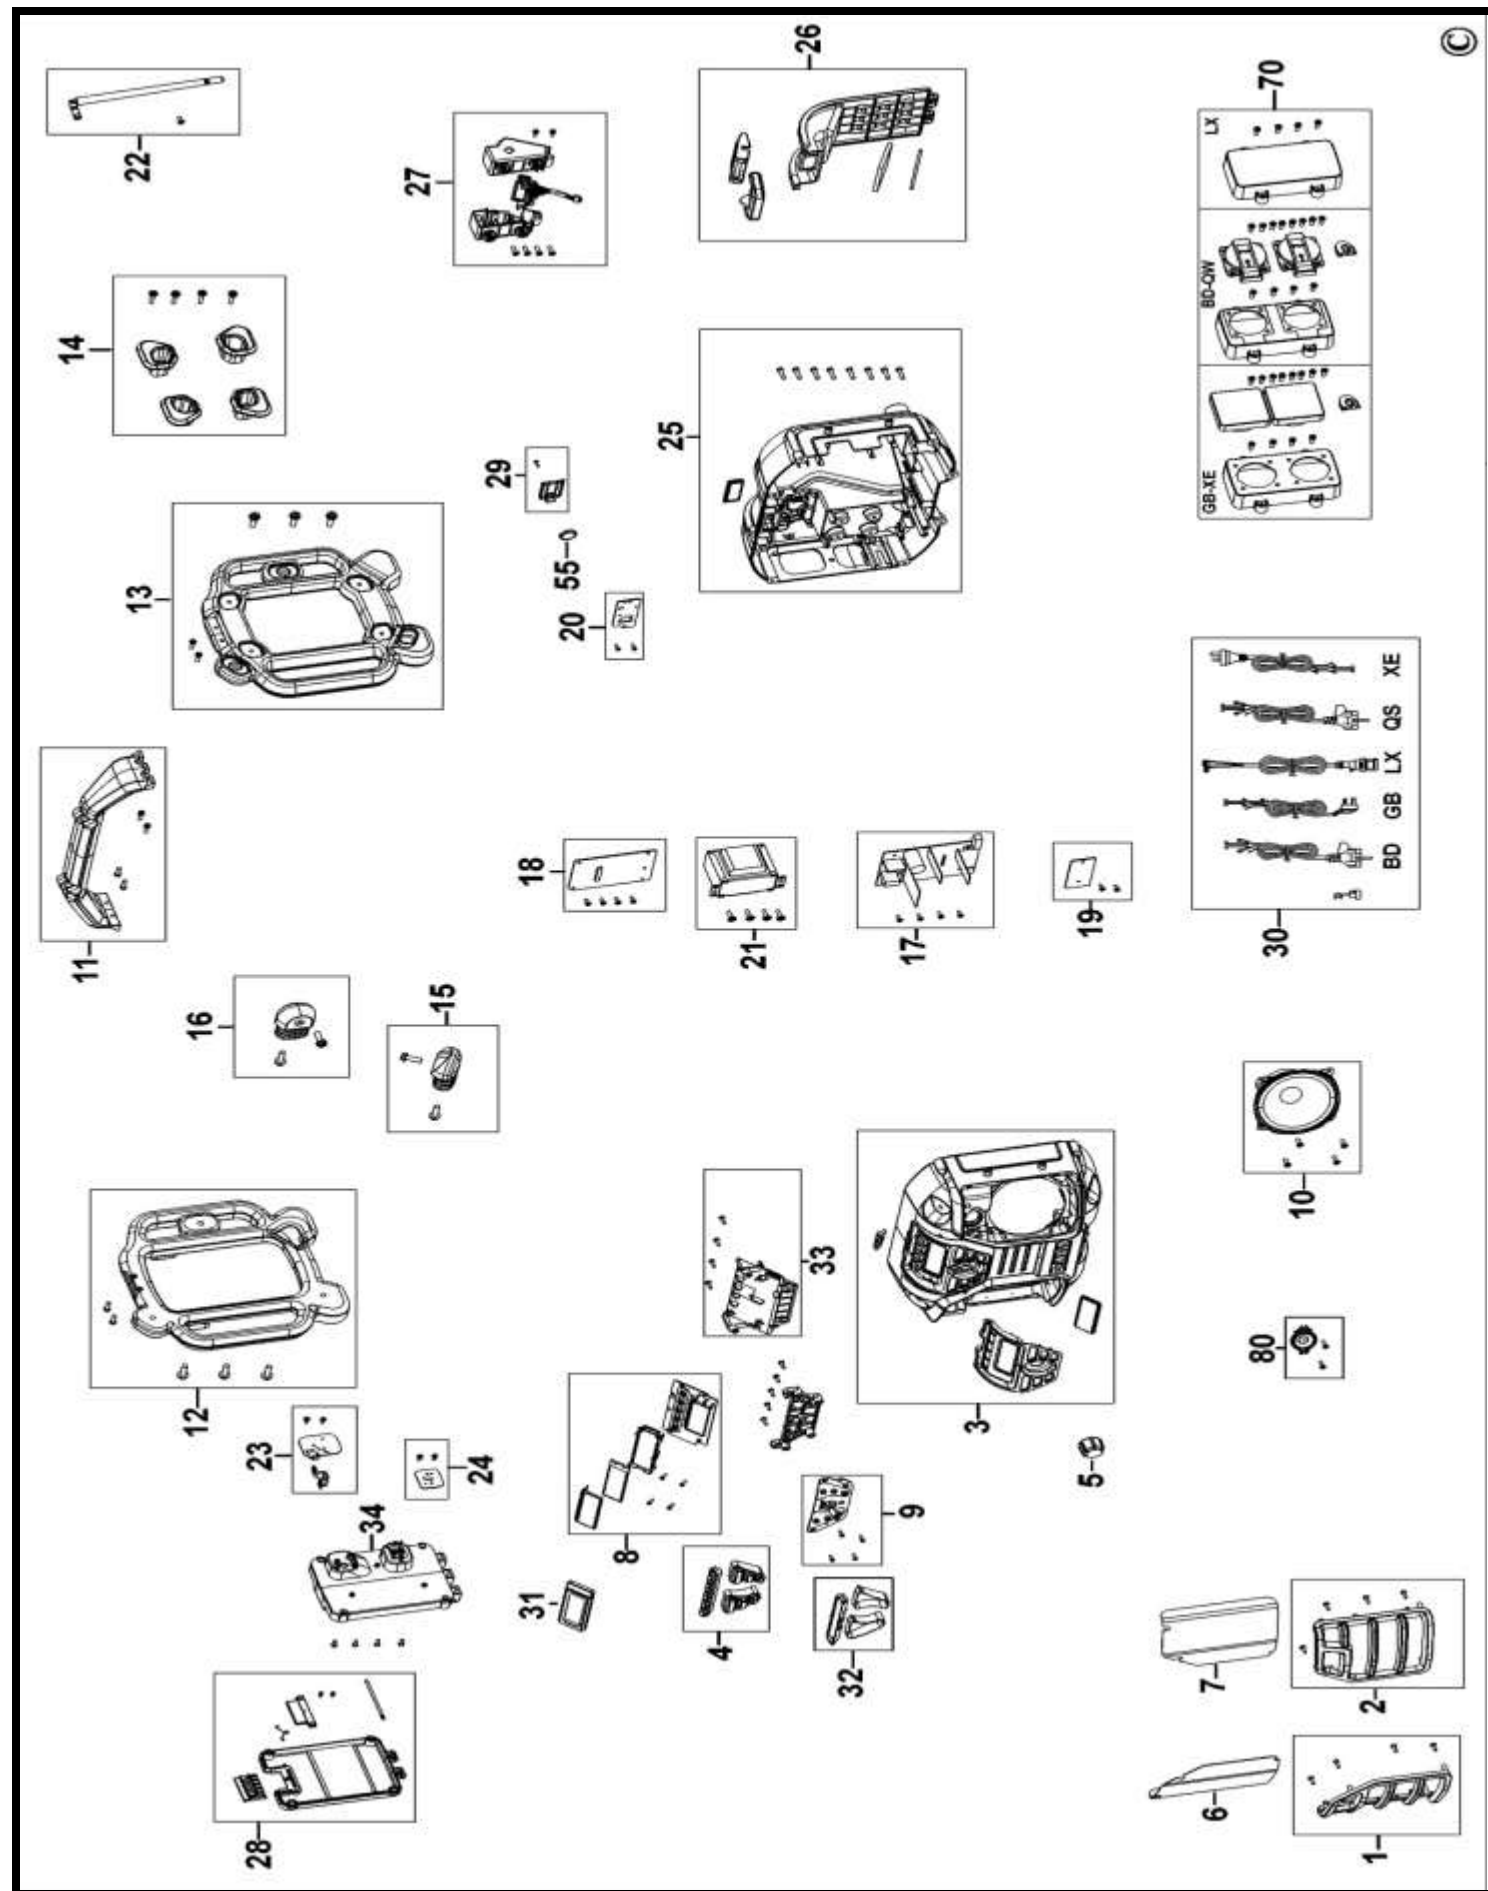

PartsList DCR017 SITERADIO 1

Item	PartNumber	Qty	PartDescription	GeneralDescription	OtherInfo	RepairInst	Markets
1	5140127-25	1	FRAMELH	No			
2	5140127-26	1	FRAMERH	No			
3	5140127-27	1	HOUSINGFRONT	No			
4	1004691-08	1	BUTTONSA	No			
5	5140127-29	1	KNOB	No			
6	5140127-30	1	GRILL LH	No			
7	5140127-31	1	GRILL RH	No			
8	1004691-09	1	PCBSA DISPLAY	No			
9	1004691-10	1	PCBSA KEYPAD	No			
10	5140127-34	2	SPEAKER LARGE	No			
11	5140127-35	1	HANDLE	No			
12	5140127-36	1	CAGE LH	No			
13	5140127-37	1	CAGE RH	No			
14	5140127-38	1	KIT	No			
15	5140127-39	4	MOUNTSA FRONT	No			
16	5140127-40	2	MOUNTSA REAR	No			
17	1004691-11	1	PCBSA POWER	No	QW		
18	1004691-12	1	PCBSA MAIN	No			
19	1004691-13	1	PCBSA CONNECT	No			
20	1004691-14	1	PCBSA BACKUP	No			
21	1004691-15	1	TRANSFORMER	No	QW		
22	1004691-17	1	ANTENNA DAB+	No			
23	1004691-18	1	PCBSA AUX	No			
24	1004691-19	1	PCBSA USB	No			
25	1004691-21	1	HOUSINGREAR	No	QW		
26	5140127-50	1	DOOR	No			
27	5140127-51	1	BATTERYCONNECTOR	No			
28	5140127-52	1	COVERSA	No			
29	5140127-53	1	DOOR BUTTON	No			
30	1004691-23	1	CORDSET(EURO)	QW	No	QW	
31	1004692-26	1	COVER DISPLAY	No			
32	5140127-95	1	KEYHOLDER	No			
33	5140127-96	1	BRACKET DISPLAY	No			

PartsList DCR017 SITERADIO 1

Item	PartNumber	Qty	PartDescription	GeneralDescription	OtherInfo	RepairInst	Markets
34	5140127-97	1	HOUSING			No	
55	5140112-26	1	BATTERY	CR2032		No	
70	000000-00	1	NOLONGERAVAILABLE			No	QW
80	5140127-99	2	SPEAKER	SMALL		No	